


# Puff Duster Assembly

602-000-310

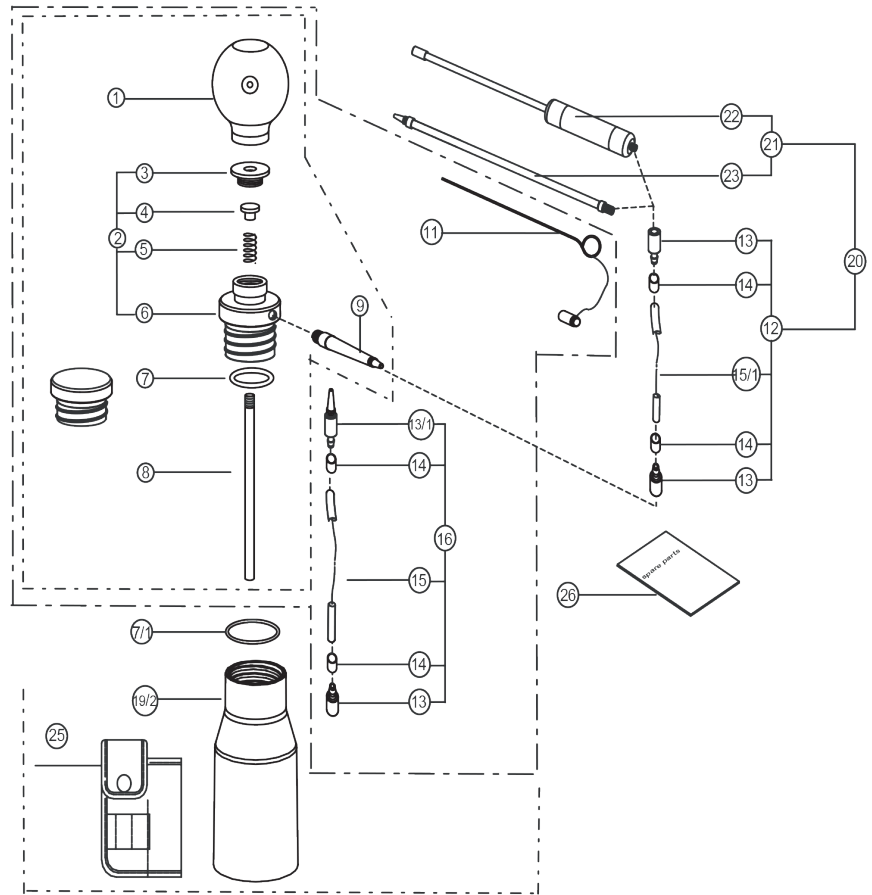

Pos.	Part no.	Description
1	602-001-000	Puff bulb
2	602-002-001	Check valve assembly (3,4,5,6)
3	602-002-010	Check valve cover
4	602-002-020	Check valve seat
5	602-002-030	Check valve spring
6	602-002-041	Airofog valve body
7	602-002-050	O-ring (22x2.5 nitrile)
7/1	412-017-000	O-ring
8	602-003-000	Supply tube
9	602-004-000	Discharge
11	602-006-010	Rod assembly
12	602-005-000	Extension hose cpl. (13x2, 14x2, 15)
13	602-005-010	Hose connector
13/1	602-005-040	Nozzle adapter

Pos.	Part no.	Description
14	602-005-020	Hose holder
15	602-005-030	Hose (9.8 in)
15/1	602-009-120	Hose (4 ft)
16	602-009-000	Extension tube with nozzle (13/1, 13, 14x2, 15/1)
19/2	602-007-020	Bottle
20	602-008-000	Extension assembly (12,21)
21	602-008-020	Extension discharge assembly (22, 23)
22	602-008-030	Extension handle
23	602-008-040	Extension lance
25	602-010-000	Carrying pouch
26	602-602-000	Instruction manual
	601-021-000	Belt (optional)



Airofog USA  
15074 Aviation Loop Drive  
Brooksville, FL 34604  
USA

+1-352-593-5152  
airofog@airofogusa.com  
www.airofogusa.com



Airofog USA  
15074 Aviation Loop Drive  
Brooksville, FL 34604  
USA

+1-352-593-5152  
[airofog@airofogusa.com](mailto:airofog@airofogusa.com)  
[www.airofogusa.com](http://www.airofogusa.com)